Quick Start Guide:

Setting up your Wi-Fi and App

Download the app. You can search either the Apple App Store for 'DRN RT WiFi' or Google Play Store for: 'DRN', then install it on your mobile device.



Select "SIGN UP" towards the bottom of the screen.



Getting started with the App

The App allows you to manage your home or small business Wi-Fi network. You can self-install and be managing your home or business within a few minutes. Download the app and start managing your home network today!

Next:

Refer to the Command IQ Consumer Product Guide for details on how to use specific features.

3 Enter your personal information. The password you enter here will be used to access the app.

Note:

Please wait at least 10 minutes after your BLAST System has been 'turned up' before attempting step 4.



If your system is plugged in and connected select "Yes" to continue.

Otherwise select "Not Sure?" at the bottom of the screen and skip to steps 4a-4e on the next page to get things connected.



Tap the QR code that appears within the app. (You will be asked to allow the app to access your camera.)
Point your camera at the QR Code found on the bottom of your BLAST System, or on the sticker that came in your box (example shown below).

Select OK. After you select "Submit", you may be asked to enter your account number.

Default Settings
SSID: CXNK001870CD
ONU MAC: 000631B41844
Security Type: WPA2_AES
WPA Key: 84f1415608b2cb13
IP Address: 192.168.1.1
User/Password: admin/347b1e66



Readi Tech

6 Note:

If your system is already operating with Wi-Fi, tap the "Click here to skip" text.

Otherwise, complete these steps to set-up your Wi-Fi.

Name your network and create a password.

- The Router Name will be used throughout the app.
- The Network Name (SSID) is what you will use as your wireless connection name.
- Select a password for your wireless network, if you do not want to change it on all the devices in your home, use your existing wireless SSID and Password from your current router.



Click Submit and you're all done!



Quick Start Guide:

In-app Wiring Guide

It's time to setup your new system. Locate your existing internet service device. This is typically known as a modem or ONT. It may look like one of these.





Unplug the device and remove all cables.
Wait 2 minutes.




After 2 minutes, plug the device back in and turn it on.



Readi Tech

Connect the ethernet cable from the ethernet/
LAN port on your existing internet service device to the port labled WAN on your new system.

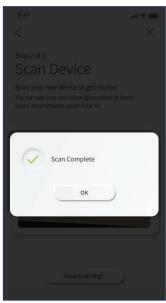

Now, connect your new system to a power outlet. It may take several minutes for the unit to be ready. It will show a solid green light. Once the device is connected, tap "Unit Ready."

Go back to step 5 on the previous page.

